

Via San Giovanni Bosco, n. 12 15121 Alessandria - Italy


Tel. +39 0131 68730

E-mail: info@mvf.it Web: www.mvf.it

EXCERPT USE AND MAINTENANCE MANUAL

INDUSTRIAL FANS

CONSTRUCTION EXECUTIONS

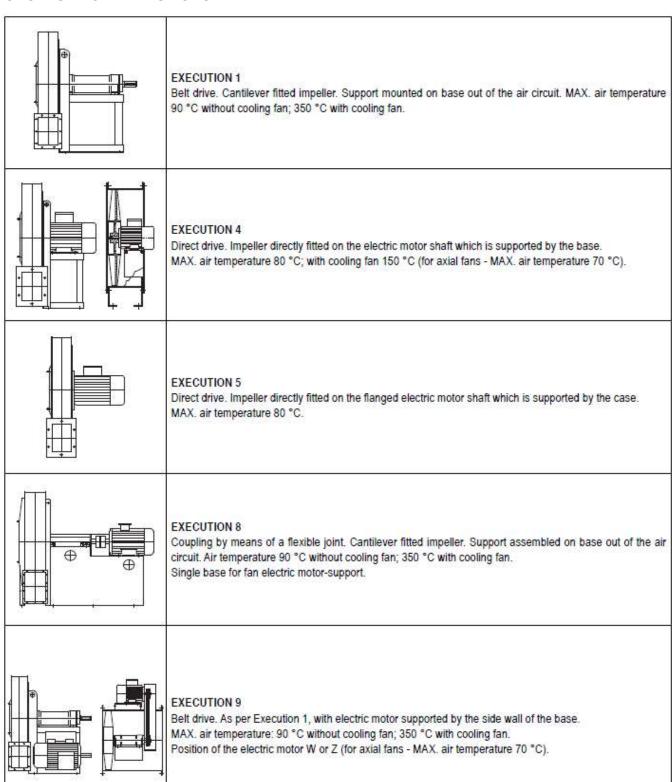




Via San Giovanni Bosco, n. 12 15121 Alessandria - Italy

Tel. +39 0131 68730

E-mail: info@mvf.it Web: www.mvf.it

EXCERPT USE AND MAINTENANCE MANUAL

INDUSTRIAL FANS

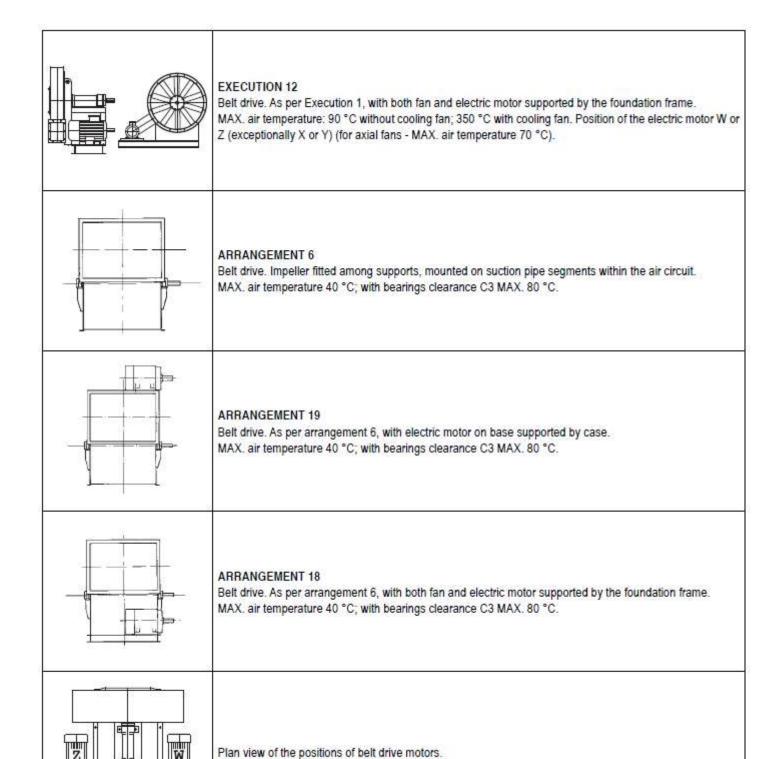



Via San Giovanni Bosco, n. 12 15121 Alessandria - Italy

Tel. +39 0131 68730

E-mail: info@mvf.it Web: www.mvf.it

EXCERPT USE AND MAINTENANCE MANUAL

INDUSTRIAL FANS


ORIENTATIONS AND MOTOR POSITION

The centrifugal fans are mounted according to 16 orientation positions (8 clockwise RD and 8 counter-clockwise LG).


The rotation direction is defined by an observer positioned on the transmission side (motor).

RD orientations, LG 180 and 225 are only possible with appropriate constructive adjustments


For the indirect transmission execution, standard motor positions are adopted

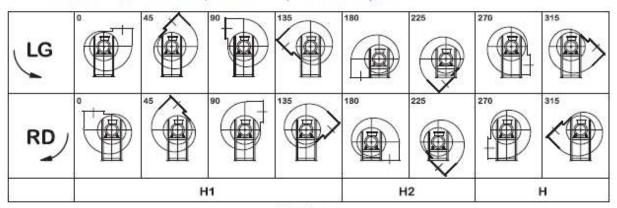

(Orientation)

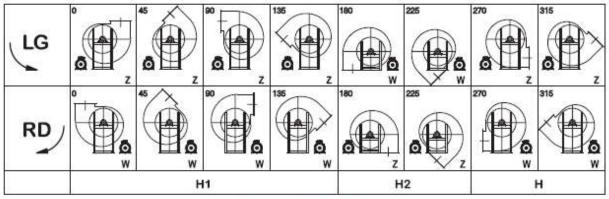

(Orientation with standard motor positions)

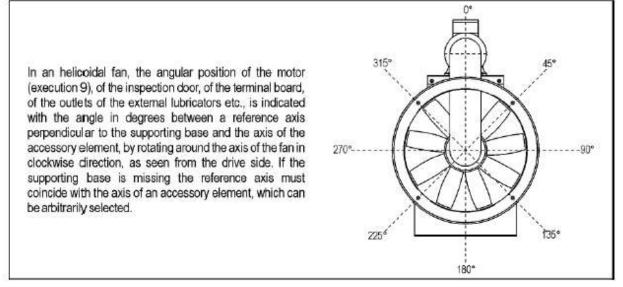

(Motor position on axial fan)



Via San Giovanni Bosco, n. 12 15121 Alessandria - Italy Tel. +39 0131 68730

E-mail: info@mvf.it Web: www.mvf.it

EXCERPT USE AND MAINTENANCE MANUAL

INDUSTRIAL FANS

Position of the motor with reference to the air flow direction.

